


CONNECTION AND RESTART

FOR VIDEO PLAYER



INITIAL CONNECTION PROCEDURE

OF THE VIDEO PLAYER

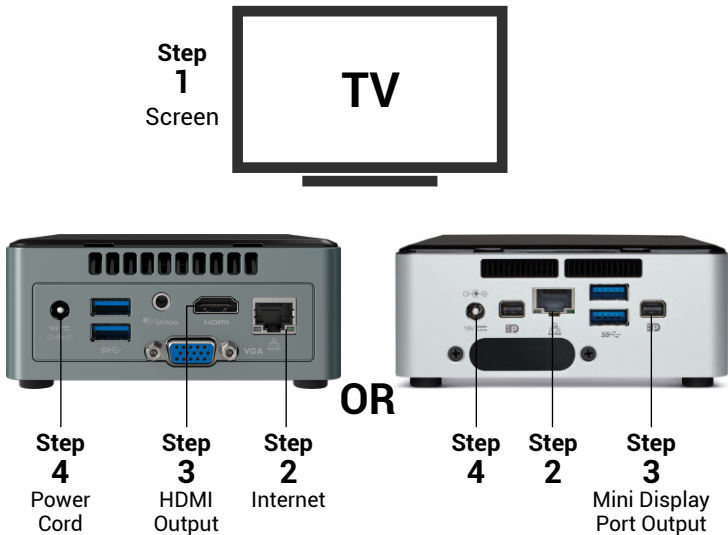


INITIAL CONNECTION STEPS :

- STEP 1 : TURN ON THE SCREEN
- STEP 2 : CONNECT THE INTERNET CABLE INTO THE PLAYER AND THE INTERNET ROUTER. MAKE SURE THE ROUTER IS ON
- STEP 3 : CONNECT THE VIDEO CABLE INTO THE PLAYER AND INTO THE SCREEN
- STEP 4 : CONNECT THE POWER CORD INTO THE PLAYER AND INTO AN ELECTRICAL OUTLET
- STEP 5 : CLICK ON THE "INPUT" OR "SOURCE" BUTTON OF THE TV'S REMOTE CONTROL AND CHOOSE THE CORRECT INPUT (HDMI OR DISPLAY PORT)

RESTART PROCEDURE

OF THE VIDEO PLAYER

(IN CASE OF BROADCASTING PROBLEM, ERROR MESSAGE OR FOLLOWING A POWER OUTAGE)

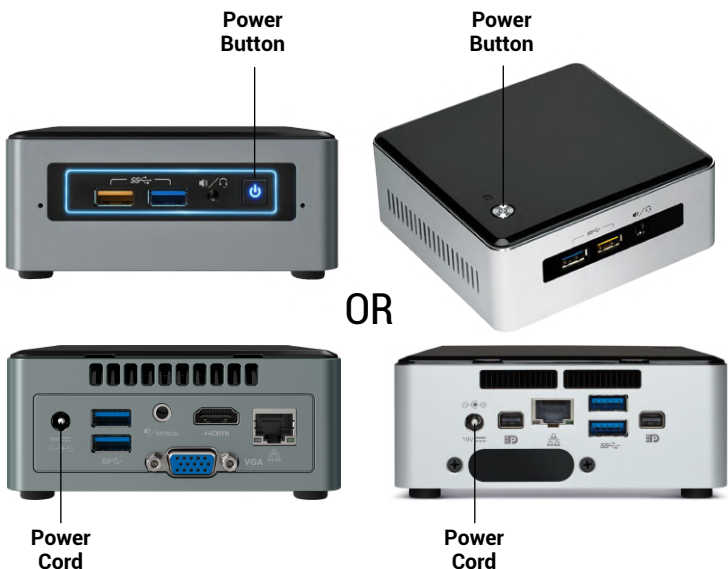

RESTART :

1) TURN THE PLAYER OFF

- STEP 1 : HOLD THE POWER BUTTON FOR 1 TO 5 SECONDS OR UNTIL THE PLAYER TURNS OFF (THE POWER BUTTON'S LIGHT TURNS OFF)
- STEP 2 : WAIT AT LEAST 30 SECONDS (YOUR PLAYER MAY RESTART AUTOMATICALLY)

2) TURN THE PLAYER ON (IF STILL TURNED OFF) :

- STEP 3 : CLICK ON THE POWER BUTTON
- STEP 4 : WAIT FOR THE PLAYER TO RESTART (THE POWER BUTTONS' LIGHT TURNS ON)

If the procedure mentioned above is not working :

1. Turn off the player again by pressing the power button for 1 to 5 seconds or until the player turns off.
2. When the power button's light is off, disconnect the power cord of the player and wait at least 1 minute.
3. Reconnect the power cord into the player.
4. Wait for the automatic restart of the player.
5. Verify that the power button's light is on, it means that the player has restarted.